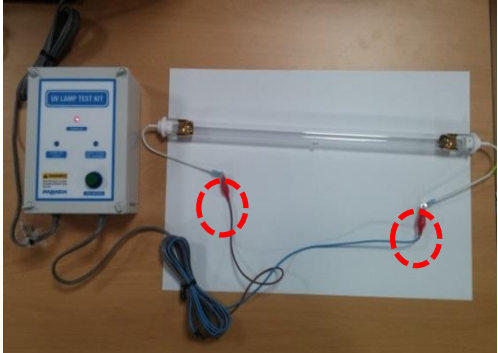
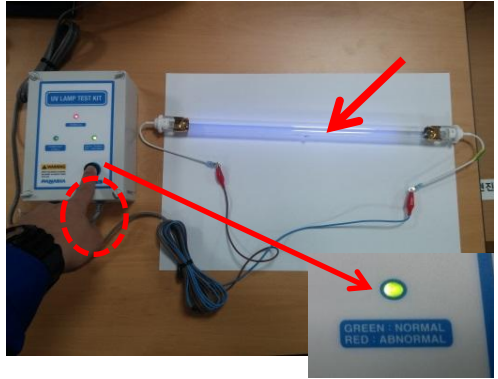


### <Manual for UV lamp test kit >

Two UV Lamps are connected in series circuit. It means that even though an UV lamp has a trouble, "two UV lamps trouble" of the alarm will occur. Ship's staff can distinguish which UV lamp is troubled by using UV lamp test kit as follows;

#### <CAUTION>

1. Do not touch clamps of electric wires during test due to a high risk of electric shock.
2. Wear insulated gloves while the UV lamps test kit is being used.

How to use 'UV Lamp test kit'		
Step	Description	Figure
1	Connect clamps with the UV lamp wires. (Refer to right figure.)	
2	Push the test button. <u>(After pushing the test button, 5 second later, it will be turned off automatically.)</u>  Check the test result. In case of normal condition - UV Lamp: ON - LED lamp: Green (Normal)	
3	Check the test result. In case of malfunction(defective) - UV Lamp: OFF - LED lamp: Red (Abnormal)	