



UV wiper housing magnet Replacement Method



UV wiper housing magnet Replacement Method




Part / Section
Part I. Check UV wiper housing magnetism page 3
Part II UV wiper housing magnet Replacement Method page 5
Part III. Old type UV wiper housing page 10

Part I

**Check UV wiper housing
magnetism**

Part I . Check UV wiper housing magnetism

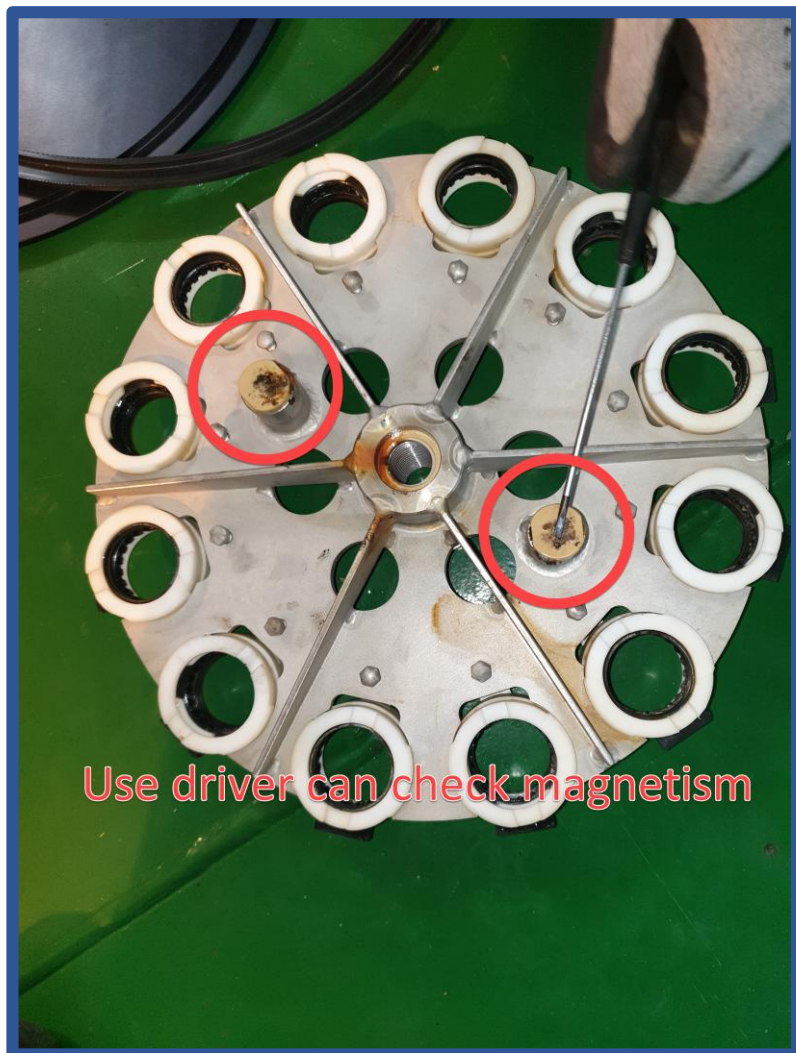

Check the UV wiper housing magnetism like picture.
If magnet is not powerful UV reed switch can not sensing. causes the uv cycle time over alarm.

Part II


UV wiper housing magnet Replacement Method

Part II. UV wiper housing magnet Replacement Method




1. Check the UV wiper housing magnet position like picture.

Part II. UV wiper housing magnet Replacement Method

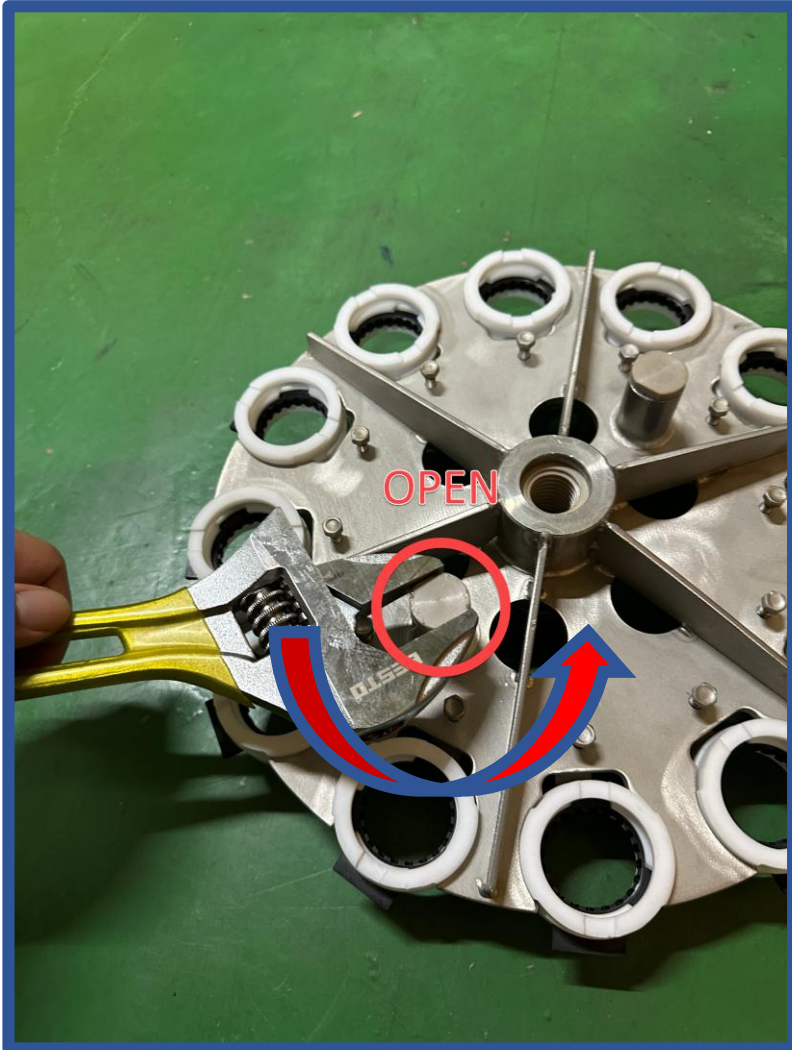


2. Open the magnet cover

Part II. UV wiper housing magnet Replacement Method

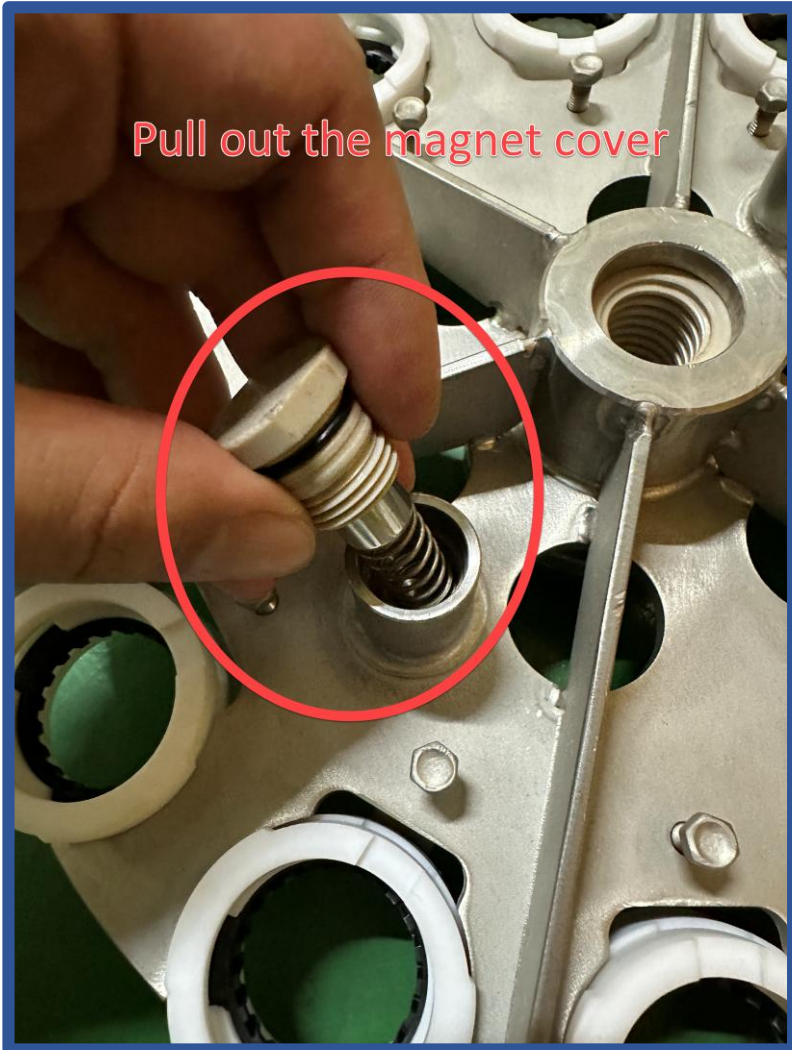

3. Pull out the magnet cover and check the magnet & spring

Part II. UV wiper housing magnet Replacement Method

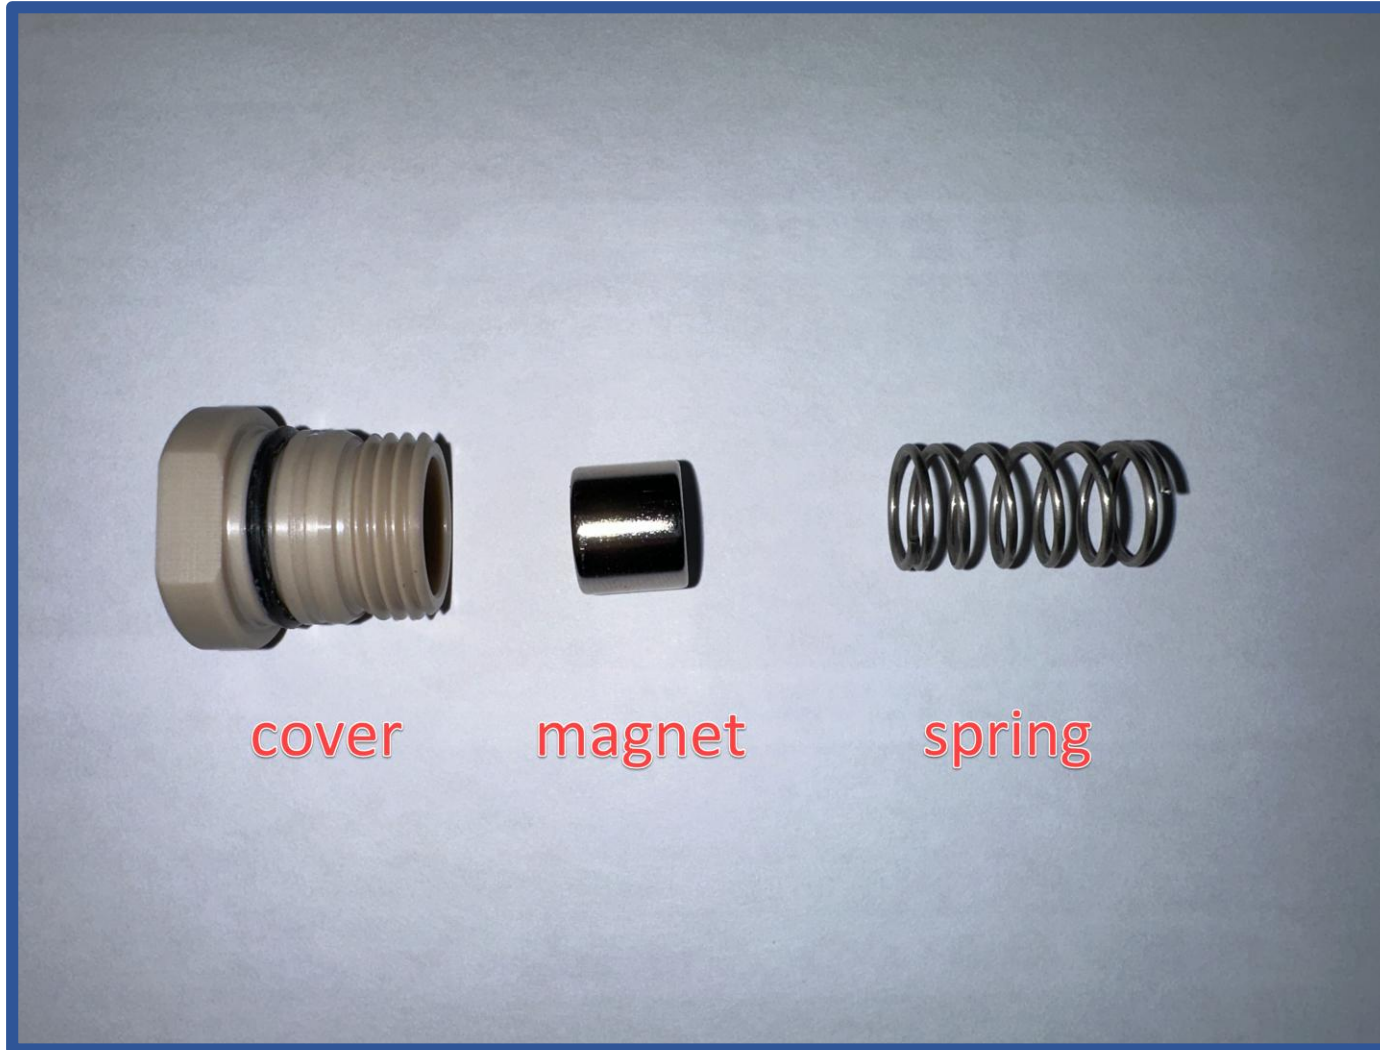

4. Check the cover, magnet, spring.

Part III

Old type UV wiper housing

Part III Old type UV wiper housing



Old type UV wiper housing can't take out the magnet. UV wiper housing and magnet is a whole thing. Need to order new type of UV wiper housing