


- **How to Change UV Intensity housing**

1. **turn and separate**




Turn and separate.

2. **turn and separate**

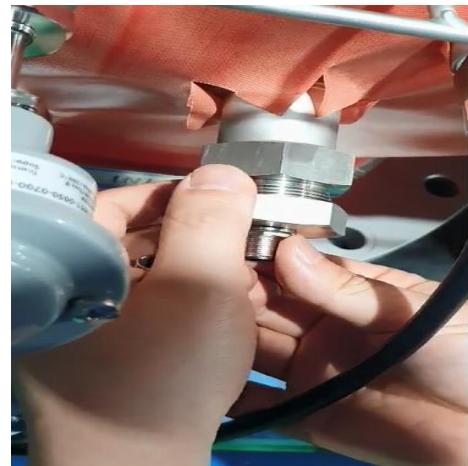


3. **Remove the UV Intensity Sensor**

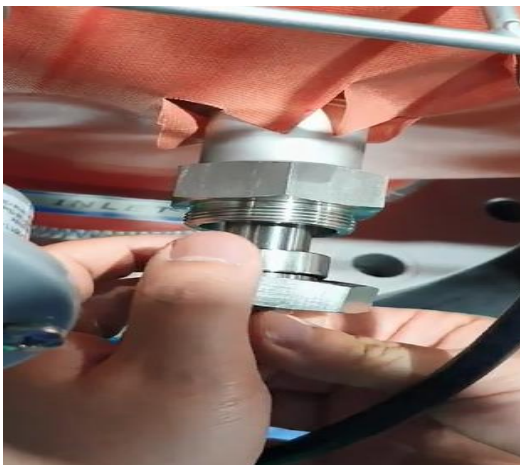

4. turn and separate (using the spanner)



5. Please pull it.

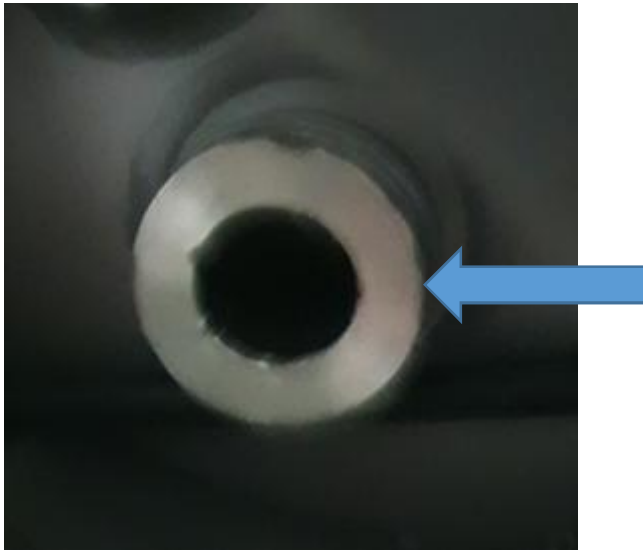

6. please assemble in reverse. Plus Change New UV Intensity housing and UV intensity sensor.

