

6. How to replace the Back-plate



WARNING – Risk to persons!

When the housing cover is open, EMC and protection against are suspended.


There are electric circuits within the housing which pose a contact risk.

The power must be switched off before opening the housing risk.



a. Disassemble the Glass cover

- Turn Glass cover in the counterclockwise

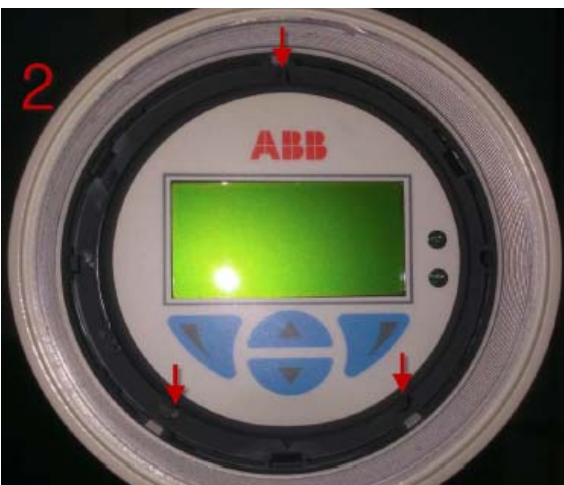


b. Disassemble the Cartridge

- Disassemble it using a Phillips screwdriver
the three(3) screws indicated left pic.

* Please remove the Cartridge very carefully.


If you pull out strongly, LCD board can be damaged.

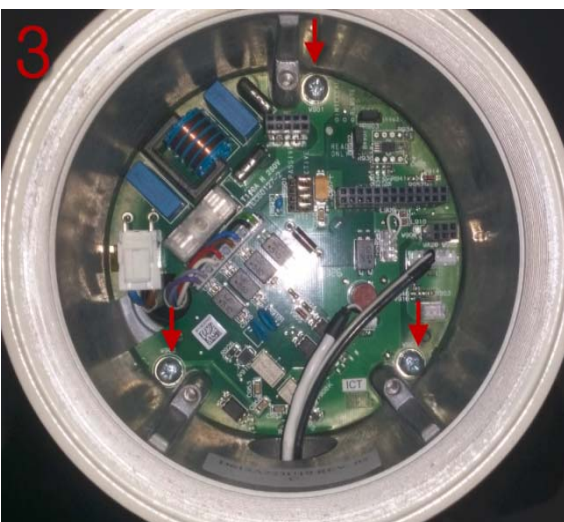

c. Disassembly of Back-plate

After disassemble all connected wires, disassemble a (+)shaped driver the 3 bolts indicated below.

While disassembling the cable on the board,
ensure cables are not cut and free from shock.

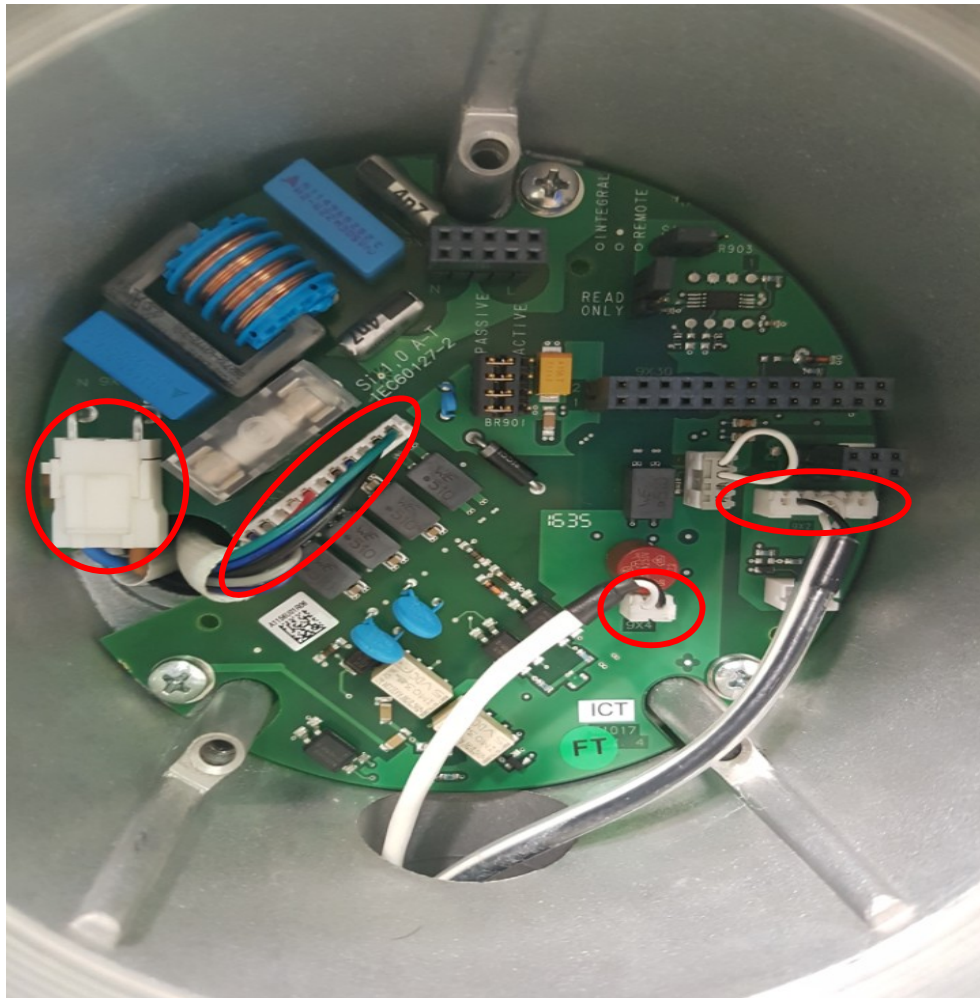

Disconnect above red mark



d. Reassemble the Cartridge

- Reassemble in reverse sequence above a. and b.

* Please ensure the PIN on the Cartridge's terminal is not bent or damaged.